SLIM LIGHT PANEL IS-SL3-4-6-NAD

IMPORTANT: Read all instructions before installing fictures. Retain for future reference.

TOOL REQUIRED


- Saw
- Flat Screwdriver
- Wire Stripper
- Measuring Tape
- Electrical Wiring (use type and gauge suitable for all applications to connect to fixtures)


SAFETY / WARNING


SAFETY: For your safety, this fixture must be wired in accordance with local electrical codes and ordinances. All work should be done by a qualified electrician.

WARNING: Make certain power is OFF from the electrical panel before starting installation or attempting any maintenance.

INSTRUCTIONS




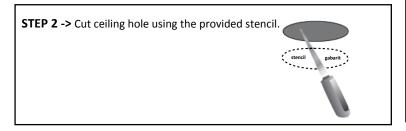

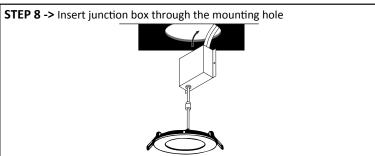


STEP 3 -> With a flat srewdriver, open the junction box cover and remove the appropriate knockout(s) on the side panel.







STEP 4 -> Insert the electrical cable through the knockout.

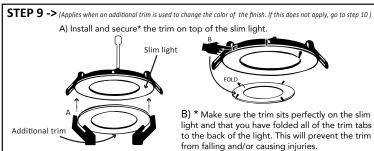

STEP 5 -> Using the QUICK CONNECT feature, connect green (ground) wire of cable to the green wire in the box. Connect white (neutral) wire of cable to the white wire of the box. Connect black wire of cable to black wire of the box.

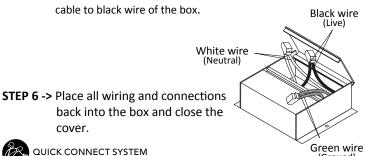






B) Release the clips and the fixture will be pulled flush to the ceiling.







Install your ultra slim light with style





